

Device Name	Manufacturer	Codes												
TV	A.R. Systems	1021												
TV	Accent	1021												
TV	Admiral	1001												
TV	Agef	1001												
TV	Aiko	1021												
TV	Aim	1021												
TV	Akai	0331	0841	1021										
TV	Akiba	1021												
TV	Akito	1021												
TV	Akura	1021												
TV	Alba	0431	1021	1041										
TV	Allstar	1021												
TV	Amplivision	1041												
TV	Amstrad	0481	1021											
TV	Anam	0251	1021											
TV	Anam National	1021												
TV	Anitech	1021												
TV	Ansonic	1021	1031	1041										
TV	AOC	0361												
TV	Aristona	1021												
TV	ASA	1001												
TV	Asberg	1021												
TV	Atlantic	1021												
TV	Audiosonic	0711	1021	1041										
TV	Audioton	1041												
TV	Autovox	1001												
TV	AWA	1021												
TV	Bang & Olufsen	0991	1001	1051										
TV	Basic Line	1021												
TV	Bauer	0441												
TV	Baur	0661	1011	1021										
TV	Beko	1021	1041											
TV	Beon	1021												
TV	Best	1041												
TV	Bestar	1021	1041											
TV	Blaupunkt	0911	0921											
TV	Blue Sky	1021												
TV	BPL	1021												
TV	Brinkmann	1021												
TV	Brionvega	1001	1021											
TV	Bruns	1001												
TV	BSR	0841												
TV	Bush	0751	1021											
TV	Candle	0351	0361											
TV	Carad	1021												
TV	Carena	1021												
TV	Cascade	1021												
TV	Casio	1021												
TV	Cathay	1021												
TV	CCE	1021												
TV	Centurion	0411	1021											
TV	Century	1001												
TV	CGE	0841	1041											
TV	Citizen	0351	0361											
TV	Clatronic	0711	1021	1041										
TV	Colortyme	0361												
TV	Concerto	0351												
TV	Condor	1021	1041											
TV	Craig	0251												
TV	Crosley	0841	1001											
TV	Crown	1021	1041											
TV	Curtis Mathes	0161	0361											
TV	Daewoo	0291	0301	0331	1021									
TV	Dansai	1021												
TV	Dantax	1041												
TV	Dawa	1021												

Device Name	Manufacturer	Codes																	
TV	Daytron	1021																	
TV	Decca	0271	0671	1021															
TV	Deitron	1021																	
TV	Desmet	1021																	
TV	Diamant	1021																	
TV	Digiline	1021																	
TV	Dixi	0331	1021																
TV	Drean	1021																	
TV	Dual	0891	1021																
TV	Dual-TEC	0901																	
TV	Dumont	0841	1001																
TV	Dux	1021																	
TV	Dynatron	1021																	
TV	Elbe	1021	1031	1041															
TV	Elcit	1001																	
TV	ELG	1021																	
TV	Elin	1021																	
TV	Elite	1021																	
TV	Elta	0331																	
TV	Emerson	0021	0061	0071	0081	0091	0101	0111	1001	1021									
TV	Envision	0361																	
TV	Erres	1021																	
TV	ESC	1021																	
TV	Etron	0331	0841	1021															
TV	Euroman	1021	1041																
TV	Europa	1021																	
TV	Europhon	0671	1021																
TV	Exquisit	1021																	
TV	Family Life	1021																	
TV	Ferguson	0711																	
TV	Fidelity	0821	1021																
TV	Finlux	0841	1001	1021															
TV	First Line	0841	1021																
TV	Fisher	0171	0841	1001	1041														
TV	Flint	1021																	
TV	Formenti	0441	0841	1001															
TV	Fortress	1001																	
TV	Fraba	1021	1041																
TV	Friac	1021																	
TV	Frontech	0711	0841																
TV	Funai	0711																	
TV	Galaxi	1021																	
TV	Galaxis	1021	1041																
TV	GBC	0841																	
TV	GE	0131	0161	0201															
TV	GEC	0271	0671	1021															
TV	Geloso	0841																	
TV	Gemini	0391																	
TV	Genexxa	0431	1021																
TV	Goldstar	0031	0121	0351	0411	1021	1041												
TV	Goodmans	1021																	
TV	Goodmans/Tashiko	0011	0271																
TV	Gorenje	1041																	
TV	Gradiente	1021																	
TV	Graetz	1021																	
TV	Granada	0671	0841	1021															
TV	Grandin	1021																	
TV	Grundig	0671	0871	0951	0961	1021													
TV	Hanseatic	1001	1021	1031	1041														
TV	Hantarex	0671	1021																
TV	Hantor	1021																	
TV	Harwood	1021																	
TV	Hauppauge	1021																	
TV	HCM	1021																	
TV	Highline	1021																	
TV	Hinari	0841	0861	1021															

Device Name	Manufacturer	Codes																	
TV	Hit	1001																	
TV	Hitachi	0181	0351	0841	1021														
TV	Hornyphone	1021																	
TV	Hypson	1021																	
TV	Iberia	1021																	
TV	ICE	1021																	
TV	Imperial	1021	1041																
TV	Indiana	1021																	
TV	Inno Hit	0671	0851	0861	1021														
TV	Innovation	0951	0961																
TV	Interfunk	0841	1001	1011	1021	1041													
TV	Internal	1021																	
TV	Intervision	1021	1041																
TV	Irradio	0851	0861	1021															
TV	Isukai	1021																	
TV	ITS	1021																	
TV	ITT	0751	0841	0931															
TV	ITT Nokia	0751	0841	0931															
TV	ITV	1021																	
TV	Jensen	0311																	
TV	JVC	0001	0261	0281	0751														
TV	Kaisui	1021																	
TV	Karcher	1021	1041																
TV	Kendo	1021	1041																
TV	Kennedy	0841																	
TV	Kenwood	0361																	
TV	Kneissel	1021	1031	1041															
TV	Kolster	1021																	
TV	Konka	1021																	
TV	Korpel	1021																	
TV	Korting	1001	1041																
TV	Kosmos	1021																	
TV	Lecson	1021																	
TV	Lenco	1021																	
TV	Leyco	1021																	
TV	Leyco	0711																	
TV	LG	1021	1041																
TV	Liesenkotter	1021																	
TV	Lifesat	0951																	
TV	Lifetec	0951	1011	1021															
TV	Loewe	1001	1011	1021	1031	1041													
TV	Loewe Opta	0661	0671	0681															
TV	Logik	0381																	
TV	Luma	1021																	
TV	Lumatron	1021																	
TV	Lux May	1021																	
TV	Luxman	0351																	
TV	Luxor	0841																	
TV	Lyco	0711																	
TV	Madison	1021																	
TV	Magnadyne	0671	0841	1001															
TV	Magnafon	0671																	
TV	Magnasonic	0031																	
TV	Magnavox	0341	0391	0401	0411	0421	0581	0591	0601	1021									
TV	Manesth	1021																	
TV	Manhattan	1021																	
TV	Marantz	0221	0351	0361	1021														
TV	Marelli	1001																	
TV	Mark	1021																	
TV	Matsui	0271	0331	1021															
TV	Maximal	0841																	
TV	Mediator	1021																	
TV	Medion	0951	0961	1021															
TV	Melectronic	1011	1021																
TV	Memorex	0331	0351	0381	0571														
TV	Mercury	1021																	

Device Name	Manufacturer	Codes																	
TV	Metz	0881	1001																
TV	MGA	0361	0561	0571															
TV	Micromaxx	0951	1021																
TV	Minoka	1021																	
TV	Mitsubishi	0221	0321	0561	0571	0751	1001	1011	1021										
TV	Mivar	0671	1031	1041															
TV	Montgomery	0351																	
TV	Morgan's	1021																	
TV	MTC	0351	0361	1011	1041														
TV	Multitec	1021																	
TV	Multitech	0671	1021	1041															
TV	NAD	0551																	
TV	Naiko	1021																	
TV	Nakamura	1021																	
TV	NEC	0241	0351	0361	1021														
TV	Neckermann	0821	0841	1001	1021	1041													
TV	NEI	1021																	
TV	Netsat	1021																	
TV	Neufunk	1021																	
TV	New Tech	1021																	
TV	Nikkai	0271	0431	0861	1021														
TV	Nikko	0031																	
TV	Noblex	1021																	
TV	Nokia	0751	0841	0931	0941	0971													
TV	Nordmende	1021																	
TV	Novatronic	1021																	
TV	Oceanic	0841																	
TV	Okano	1021	1041																
TV	Opera	1021																	
TV	Optimus	0551																	
TV	Optonica	0541																	
TV	Orbit	1021																	
TV	Orion	0841	1021																
TV	Online	1021																	
TV	Osaka	0861																	
TV	Osaki	0271	0861	1021															
TV	Osio	1021																	
TV	Otto Versand	0751	0841	1011	1021														
TV	Palladium	1001	1021	1041															
TV	Palsonic	1021																	
TV	Panama	1021																	
TV	Panasonic	0191	0251	1021															
TV	Panavision	1021																	
TV	Pathe Cinema	1031																	
TV	Penny	0161	0351	0361	0521	0531													
TV	Perdio	1021																	
TV	Perfekt	1021																	
TV	Philco	0361	0581	0591	0601	1001	1021	1041											
TV	Philips	0401	0651	0691	0701	0721	1001	1021											
TV	Phoenix	1001	1021	1041															
TV	Phonola	1001	1021																
TV	Pilot	1021																	
TV	Pioneer	0511	0551	1021	1041														
TV	Pionier	1041																	
TV	Plantron	1021																	
TV	Prandoni-Prince	0671																	
TV	Prandoni-Promce	0671																	
TV	Profex	0841																	
TV	Profitronic	1021																	
TV	Proline	1021																	
TV	Prosonic	1021	1041																
TV	Protech	0711	0841	1021															
TV	Proton	0351	0501																
TV	Provision	1021																	
TV	Pulser	0351																	
TV	Pye	1001	1021																

Device Name	Manufacturer	Codes												
TV	Quasar	0251												
TV	Quelle	0641	1011	1021										
TV	R-Line	1021												
TV	Radialva	1021												
TV	Radiola	1021												
TV	Radiomarelli	1001	1021											
TV	RadioShack	0541	1021											
TV	Radiotone	1021	1041											
TV	RCA	0051	0141	0151	0181	0411	0491	0531						
TV	Realistic	0541												
TV	Recor	1021												
TV	Rectiligne	1021												
TV	Rediffusion	0841	0931											
TV	Redstar	1021												
TV	Reflex	1021												
TV	Revox	1021	1041											
TV	Rex	0891	0901											
TV	RFT	1001	1031	1041										
TV	Roadstar	1021												
TV	Robotron	1001												
TV	Rodex	1021												
TV	Royal Lux	1041												
TV	Saba	0671	1001											
TV	Saisho	0331												
TV	Salora	0821	0841											
TV	Sambers	0671												
TV	Sampo	0361												
TV	Samsung	0331	0341	0351	0361	0711	0861	1021	1041					
TV	Sansui	1021												
TV	Sanyo	0171	0231	0271	0751	1021	1031	1041						
TV	Save	1021												
TV	SBR	1021												
TV	Schneider	0891	0901	1021										
TV	Sears	0161	0171	0351	0481	0521								
TV	SEG	1021												
TV	SEI	0841	1001	1021										
TV	Seleco	0891	0901											
TV	Sharp	0461	0471	0541	0611	0621								
TV	Siam	1021												
TV	Siarem	0671	0841	1001										
TV	Siemens	0861	0911	0921	1021									
TV	Siera	1021												
TV	Siesta	1041												
TV	Signature	0351	0381											
TV	Silva	1021												
TV	Silver	0711	1021											
TV	Simpson	0581												
TV	Singer	1001	1021											
TV	Sinudyne	0841	1001	1021										
TV	Sky	1021												
TV	Solavox	0861												
TV	Sonitron	1041												
TV	Sonneclair	1021												
TV	Sonoko	0711	1021											
TV	Sontec	1021	1041											
TV	Sony	0371	0451	0631										
TV	Soundwave	1021												
TV	Squareview	0481												
TV	Standard	1021												
TV	Starlite	1021												
TV	Stern	0891	0901											
TV	Strato	1021												
TV	Sunkai	1021												
TV	Sunstar	1021												
TV	Sunwood	1021												
TV	SuperTech	1021												

Device Name	Manufacturer	Codes												
TV	Supra	0351												
TV	Sylvania	0361	0441	0581	0591	0601								
TV	Symphonic	0481												
TV	Tandberg	0681	0761	0881										
TV	Tandy	0271	0431											
TV	Tatung	0271	0671	1021										
TV	Tcm	0951												
TV	Teac	1011	1021											
TV	Tech Line	1021												
TV	Techwood	0351												
TV	Teknika	0351	0381	0571										
TV	Telecor	1021												
TV	Telefunken	0691	0731	0741	0771	0781	0791	0811	0981	1021				
TV	Telefusion	1021												
TV	Telegazi	1021												
TV	Telemeister	1021												
TV	Telesonic	1021												
TV	Telestar	1021												
TV	Teletex	0331	1021											
TV	Tempest	1021												
TV	Tennessee	1021												
TV	Tensai	1021												
TV	Tera	0501												
TV	Tevion	1021												
TV	Thomson	0691	0731	0741	0771	0781	0791	1021						
TV	Thorn	1011	1021											
TV	Thorn-Ferguson	0711												
TV	TMK	0351												
TV	Tokai	1021												
TV	Toshiba	0351	0521	0751	0801									
TV	Trans Continens	1021												
TV	Transonic	1011	1021											
TV	Triumph	0671	1021											
TV	Uher	1021	1041											
TV	Ultravox	0841	1001	1021										
TV	Unic Line	1021												
TV	United	1021												
TV	Universum	0711	1011	1021	1041									
TV	Univox	1001	1021											
TV	Vector Research	0361												
TV	Vestel	1021												
TV	Vexa	1021												
TV	VideoSystem	1021												
TV	Vidikron	0211												
TV	Vision	1021												
TV	Vortec	1021												
TV	Voxson	1001	1021											
TV	Waltham	1021												
TV	Wards	0361	0381	0451	0541	0581	0591	0601						
TV	Watson	1021												
TV	Watt Radio	0841												
TV	Wega	0841	1001	1021										
TV	Weltblick	1021												
TV	Wharfedale	1021												
TV	White Westinghouse	1021												
TV	Xrypton	1021												
TV	Yamaha	0361												
TV	Yamishi	1021												
TV	Yokan	1021												
TV	Yoko	1021	1041											
TV	Zanussi	0891	0901											
TV	Zenith	0011	0041	0381										
VCR	Aiwa	0612												
VCR	Akai	0262	0612	0762	0782									
VCR	Alba	0662	0692											
VCR	ASA	0622												

Device Name	Manufacturer	Codes																
VCR	Audio Dynamics	0202																
VCR	Baird	0612	0692															
VCR	Bang & olufsen	0612	0842	0852														
VCR	Baur	0622	0632	0782														
VCR	Blaupunkt	0412	0632	0652	0682	0702	0752	0802										
VCR	Bush	0692	0782															
VCR	Candle	0342																
VCR	Capehart	0662																
VCR	CGE	0612	0762															
VCR	Citizen	0342																
VCR	Craig	0642																
VCR	Crown	0662	0692															
VCR	Curtis Mathes	0342																
VCR	Daewoo	0662	0692															
VCR	Daytron	0662																
VCR	DBX	0202																
VCR	Decca	0612	0622															
VCR	Degraaf	0622	0722															
VCR	Dual	0612	0742															
VCR	Dumont	0622	0722															
VCR	Dynatech	0342	0472															
VCR	Elin	0642																
VCR	Emerson	0072	0122	0132	0142	0152	0162	0172	0182	0192	0212	0342	0712					
VCR	Ferguson	0612																
VCR	Finlandia	0622	0722															
VCR	Finlux	0612	0622	0702	0722	0732												
VCR	Fisher	0722	0732															
VCR	Formenti-Phoenix	0622																
VCR	Frontech	0662																
VCR	GEC	0622																
VCR	Goldstar	0082	0782															
VCR	Goodmans	0402	0642	0692														
VCR	Graetz	0612																
VCR	Granada	0622	0652	0702	0722	0732	0782											
VCR	Grundig	0622	0632	0652	0682	0812	0822	0832										
VCR	Hanseatic	0622	0782															
VCR	Hinari	0712																
VCR	Hitachi	0102	0562	0572	0582	0592	0602	0612	0782									
VCR	Imperial	0642																
VCR	Inno Hit	0622	0642															
VCR	Interfunk	0622																
VCR	ITT	0612	0642	0722	0732	0762												
VCR	ITT Nokia	0612	0642	0722	0732	0762												
VCR	Jensen	0612																
VCR	JVC	0002	0202	0472	0522	0532	0542	0552	0612	0762	0772							
VCR	Karcher	0622	0642	0782														
VCR	Kenwood	0202	0542	0612	0732													
VCR	Loewe Opta	0622	0652	0672														
VCR	Logik	0642																
VCR	Luxor	0732	0782															
VCR	LXI	0022	0342															
VCR	Magnadyne	0622																
VCR	Magnasonic	0732																
VCR	Magnavox	0342	0482	0492	0502	0512												
VCR	Marantz	0202	0402	0622	0652													
VCR	Matsui	0612	0622	0632	0712	0782												
VCR	Matsushita	0342																
VCR	MEI	0222																
VCR	Memorex	0232	0242	0472	0512	0722	0732											
VCR	Metz	0632	0652															
VCR	Minerva	0632	0652	0682														
VCR	Minolta	0592	0602															
VCR	Mitsubishi	0452	0462	0542	0622	0632												
VCR	Montgomery	0472																
VCR	Motorola	0472																
VCR	MTC	0642																

Device Name	Manufacturer	Codes															
VCR	Multitech	0622	0632	0692													
VCR	N.E.I.	0622															
VCR	NAD	0442															
VCR	National	0702															
VCR	NEC	0202	0292	0422	0432	0542	0612										
VCR	Neckermann	0612	0622	0642	0652	0712	0732	0762	0782								
VCR	Nikkai	0642	0662														
VCR	Nobliko	0652															
VCR	Nokia	0612	0642	0722	0732	0762											
VCR	Nordmende	0612	0742	0762	0772												
VCR	Olympus	0412	0702														
VCR	Optimus	0442	0472														
VCR	Optonica	0402	0472														
VCR	Orion	0212	0712														
VCR	Otto Versand	0622	0632	0782													
VCR	Panasonic	0012	0052	0092	0222	0342	0372	0382	0392	0412	0702	0752	0802				
VCR	Penny	0202	0432	0602													
VCR	Pentax	0592	0602														
VCR	Philips	0282	0342	0402	0492	0622	0652	0672									
VCR	Phonola	0622	0672														
VCR	Pioneer	0442	0542	0622													
VCR	Portland	0662															
VCR	Pulsar	0512															
VCR	Pye	0622	0672														
VCR	Quartz	0272	0732														
VCR	Quasar	0382	0392														
VCR	Quelle	0612	0622	0632	0642	0652	0702	0712									
VCR	RadioShack	0472															
VCR	RCA	0112	0382	0392	0482	0592	0602										
VCR	Realistic	0402	0472	0642	0722	0732											
VCR	Rex	0612	0772														
VCR	Ricoh	0352	0362														
VCR	Saba	0612	0742	0762	0772												
VCR	Saisho	0212	0582	0712													
VCR	Salora	0732	0782														
VCR	Samsung	0212	0312	0622	0642												
VCR	Sanky	0472	0512														
VCR	Sansui	0292	0542	0612													
VCR	Sanyo	0242	0722	0732													
VCR	SBR	0282	0622	0672													
VCR	Schaub Lorenz	0612															
VCR	Schneider	0622	0642														
VCR	Scott	0342															
VCR	Sears	0302	0342	0592	0602												
VCR	SEG	0642															
VCR	Seleco	0612															
VCR	Sentra	0662															
VCR	Sharp	0402	0472														
VCR	Siemens	0632	0652	0682	0732												
VCR	Sinudyne	0622															
VCR	Sonitron	0722	0732														
VCR	Sonoko	0692															
VCR	Sony	0032	0332	0352	0362												
VCR	STS	0602															
VCR	Sunpak	0352															
VCR	Sylvania	0492	0502														
VCR	Tandberg	0632	0712														
VCR	Tatung	0612	0622														
VCR	Teac	0612															
VCR	Technics	0702															
VCR	Teknika	0322															
VCR	Telefunken	0252	0612	0742	0762	0772	0792										
VCR	Thomson	0612	0742	0762													
VCR	Thorn	0612															
VCR	Thorn-Ferguson	0612	0762														
VCR	TMK	0212	0712														

Device Name	Manufacturer	Codes													
VCR	Toshiba	0062	0302	0342	0612										
VCR	Totevision	0642													
VCR	Uher	0612	0642												
VCR	Unitech	0642													
VCR	Vector Research	0202	0432												
VCR	Victor	0542	0552	0612											
VCR	Video Concepts	0202	0432												
VCR	Wards	0322	0402	0472	0482	0602									
VCR	Yamaha	0202	0612												
VCR	Yoko	0632	0642												
VCR	Zenith	0042	0362	0512											
SAT	ABC	0253	0373												
SAT	Akiba	0963													
SAT	Alba	0963													
SAT	Allsat	0923													
SAT	Alpha Star	0773													
SAT	Amstrad	1143													
SAT	Ansonic	0953													
SAT	Antronix	0133													
SAT	Archer	0133	0283												
SAT	Astra	1053													
SAT	Autovox	1113													
SAT	BBT	0073													
SAT	Beko	0963													
SAT	British Sky Broadcasting (BskyB)	1143													
SAT	BT	1033													
SAT	Cabletime	0163													
SAT	Canal Digital	0943													
SAT	Canal Satellite	0943	0953												
SAT	Canal +	0863													
SAT	Canalt	0943													
SAT	Carena	0963													
SAT	Clyde Cablevision	0193													
SAT	Colour Voice	0303	0343												
SAT	Comtronics	0213	0273												
SAT	Conrad	1063													
SAT	Cyrus	0923													
SAT	D-Box	1073	1213	1253											
SAT	DNT	0923													
SAT	Dual	1113													
SAT	Eagle Comtronics	0273													
SAT	Eastern	0063													
SAT	Echostar	0783	0943												
SAT	Electricord	0203													
SAT	Electus	0263													
SAT	Ferguson	1113													
SAT	Finlandia	0963	1053												
SAT	Finlux	0963													
SAT	Flint	0963													
SAT	GE	0113	0123												
SAT	GEC Cable System	0193													
SAT	General Instrument	0793	0803												
SAT	Gold Box	0943	0953												
SAT	Gooding	1023													
SAT	Goodmans	0403	0963												
SAT	Granada	1053													
SAT	Grundig	0973	0983	1023	1143										
SAT	Hamlin	0633	0643	0653	0663	0673									
SAT	Hirschmann	1063													
SAT	Hisawa	0963													
SAT	Hitachi	0753	0963												
SAT	HTS	0783													
SAT	Hughes Network Systems	0813													
SAT	ITT	1053													
SAT	ITT Nokia	1163													
SAT	Jerrold	0253	0433	0593	0603	0613	0803	0823							

Device Name	Manufacturer	Codes													
SAT	JOK	1033													
SAT	JVC	1023													
SAT	Kathrein	0923													
SAT	Luxor	1053	1063	1073											
SAT	Magnavox	0003	0413	0423	0763										
SAT	Mamm	0293													
SAT	Manhattan	0963													
SAT	Marantz	0923													
SAT	Maspro	0973	1113												
SAT	Matsui	1023													
SAT	MediaSat	0943													
SAT	Memorex	0003	0383	0763											
SAT	Minerva	1023													
SAT	Mitsubishi	1053													
SAT	Mivar	0953													
SAT	Movie Time	0143	0203												
SAT	Myryad	0923													
SAT	Nokia	0963	1053	1063	1073	1083	1203	1223	1233	1243	1263	1273			
SAT	Northcoast	0013													
SAT	NSC	0143													
SAT	OAK	0103													
SAT	OAK Sigma	0533	0543												
SAT	Ondigital	0933	1013	1093											
SAT	Pace	0903	0963	1093	1103	1113	1123	1133	1143	1153	1223				
SAT	Palladium	1023													
SAT	Panasat	1173													
SAT	Panasonic	0443	0453	0463	0473	1143									
SAT	Panda	0963													
SAT	Paragon	0383													
SAT	Philips	0003	0033	0213	0303	0313	0323	0333	0343	0413	0423	0763			
SAT	Philips	0913	0923	0933	0943	0953	0963	0973	0983	0993	1003	1013			
SAT	Philips	1023	1033	1043	1223										
SAT	Pioneer	0003	0083	0553	0693	0943									
SAT	Premiere	0943	0953	1073											
SAT	PrimeStar	0803	0823												
SAT	Pulsar	0383													
SAT	Promax	0963													
SAT	Radiola	0923													
SAT	RCA	0833													
SAT	RCA Digital Satellite System	0393	0403												
SAT	Realistic	0133													
SAT	Regency/Eastern	0683													
SAT	RFT	0923													
SAT	Runco	0383													
SAT	Saba	1033	1113												
SAT	Sabre	0963													
SAT	Sagem	0963	1183												
SAT	Salora	1053													
SAT	Samsung	0273													
SAT	Schneider	0983	1113												
SAT	Scientific Atlanta	0363	0563	0573	0583										
SAT	Sedea	0863	0873	0883											
SAT	Signal	0273													
SAT	Sky	0893													
SAT	SL Marx	0273													
SAT	Sony	0843	1143												
SAT	Spectavision	0233													
SAT	Standard Components	0183													
SAT	Starcom V	0253													
SAT	Stargate	0273													
SAT	Strong	1173													
SAT	Sylvania/Texscan	0373	0493												
SAT	Tandberg	1193													
SAT	Tantec	0963	1113												
SAT	Teknika	0173													
SAT	Teleservice	0053													

Device Name	Manufacturer	Codes																	
SAT	Teleview	0273																	
SAT	Texscan	0183	0373																
SAT	TFC	0023																	
SAT	Thomson	0943	0963																
SAT	Tocom	0223	0353	0503	0513	0523													
SAT	Toshiba	0383	0853																
SAT	Tps	0873	1183																
SAT	Tudi	0043																	
SAT	Universum	1023																	
SAT	Uniden	0763																	
SAT	Unika	0133																	
SAT	Universal	0133	0153	0203	0283														
SAT	Ventana	0923																	
SAT	Videoway	0093																	
SAT	Viewstar	0213																	
SAT	Wisi	0963																	
SAT	Xsat	0883																	
SAT	ABC	0532	0785																
CD/SACD	Acoustic Research	1346																	
CD/SACD	ADC	0076	0116																
CD/SACD	Adcom	0256	0306	1066															
CD/SACD	ADS	0316																	
CD/SACD	Aiwa	0346	0996	1086	1106														
CD/SACD	Akai	0226	0536	0586															
CD/SACD	Alpine	1266	1356																
CD/SACD	Audio-Technica	0596																	
CD/SACD	BSR	0296	0706	0826															
CD/SACD	California Audio Lab	0106																	
CD/SACD	Cambridge Audio	1416																	
CD/SACD	Capetronic	1256																	
CD/SACD	Carrera	0296																	
CD/SACD	Carver	0336	1186																
CD/SACD	Casio	0396																	
CD/SACD	Crown	0236																	
CD/SACD	Curtis Mathes	0396																	
CD/SACD	Denon	0326	0926	0936															
CD/SACD	Dual	0556																	
CD/SACD	Dynamic Bass (h)	0606																	
CD/SACD	Emerson	0256	0376	1156															
CD/SACD	Eroica	1326																	
CD/SACD	Fisher	0146	0606	0976	1056														
CD/SACD	Garrard	0416																	
CD/SACD	Genexxa	0356	0376	1156															
CD/SACD	Goldstar	1186	1276	1316	1386														
CD/SACD	H/K	0156	0226	0516	1046														
CD/SACD	Hitachi	0246	0256	0556	0866														
CD/SACD	Inkel	0166	0446																
CD/SACD	JVC	0366																	
CD/SACD	Kenwood	0096	0146	0456	0636	0776	0786	0796	0806	0946									
KRELL CD/SACD	KAV-250cd/2	1426																	
KRELL CD/SACD	KAV-280cd	1426																	
KRELL CD/SACD	KAV-300cd	1436																	
KRELL CD/SACD	KPS-20i	1466																	
KRELL CD/SACD	KPS-20il	1476																	
KRELL CD/SACD	KPS-30i	1486																	
KRELL CD/SACD	KPS 25 sc	1446																	
KRELL CD/SACD	KPS 28c	1436																	
KRELL CD/SACD	SACD Standard	1456																	
CD/SACD	Kyocera	0076																	
CD/SACD	Luxman	0126	0476	0726	0756	0766	1036												
CD/SACD	Magnavox	0216	0266	0696	1006														
CD/SACD	Marantz	0266	0286	0426	0836	1396													
CD/SACD	Mcintosh	0406	1136																
CD/SACD	MCS	0956	1366																
CD/SACD	Memorex	0256	0276	0286	0356	0376	1156												
CD/SACD	MGA	0186																	

Device Name	Manufacturer	Codes																	
CD/SACD	Mission	0266																	
CD/SACD	Mitsubishi	0186	0496																
CD/SACD	MTC	1306																	
CD/SACD	NAD	0086	0666	0736	0746														
CD/SACD	Nakamichi	0176	0486	0566															
CD/SACD	NEC	0306	0956	1016															
CD/SACD	Nikko	0596	1056																
CD/SACD	Onkyo	0206	0506	0546	0856	1206													
CD/SACD	Optimus	0276	0296	0606	0646	0896	0906	0916	0946	0986									
CD/SACD	Panasonic	0106	0876	1146	1176														
CD/SACD	Penny	0956																	
CD/SACD	Philips	0216	0266																
CD/SACD	Pioneer	0356	0986	1096															
CD/SACD	Proton	0266	1236																
CD/SACD	Quasar	0106																	
CD/SACD	RCA	0256	0966	1166															
CD/SACD	Realistic	0256	0276	0286	0376	0606	0896												
CD/SACD	Revox	1226																	
CD/SACD	Rotel	0006	0016	0026	0036	0046	0266												
CD/SACD	Saba Telecommander (e)	0556																	
CD/SACD	SAE	0266																	
CD/SACD	Samsung	1336																	
CD/SACD	Sansui	0266	0676	1026	1076	1156													
CD/SACD	Sanyo	0196	0606	0686	0816														
CD/SACD	Scott	0376	1156																
CD/SACD	Sears	0396																	
CD/SACD	Sharp	0286	0716	0946	1116	1126													
CD/SACD	Sherwood	0166	0286	0446	0526														
CD/SACD	Siemens Garrard	1296																	
CD/SACD	Signature	0226																	
CD/SACD	Sontec	1216																	
CD/SACD	Sony	0116	0616	0916	1196														
CD/SACD	Staron	1286																	
CD/SACD	STS	0076																	
CD/SACD	Sylvania	0266																	
CD/SACD	Symphonic	0386																	
CD/SACD	Tandy	0356																	
CD/SACD	Tangberg	1246																	
CD/SACD	Teac	0286	0386	0436	0576	0846	0886	1406											
CD/SACD	Technics	0106	0656	1146															
CD/SACD	Techwood	1376																	
CD/SACD	Telefunken	0556																	
CD/SACD	Thomson	0556																	
CD/SACD	Toshiba	0086	0736																
CD/SACD	Vector Research	0116	1186																
CD/SACD	Victor	0366																	
CD/SACD	Wards	0226																	
CD/SACD	Yamaha	0056	0066	0136	0466	0596	0626	1116											
DVD	Akai	0068																	
DVD	Denon	0208																	
DVD	Finlux	0278																	
DVD	Goldstar	0278																	
DVD	Grundig	0288																	
DVD	Hanseatic	0278																	
DVD	Harman/Kardon	0318																	
DVD	Hitachi	0308	0338	0378															
DVD	JVC	0098	0188	0288															
DVD	Kenwood	0158																	
KRELL DVD	Krell DVD Standard	0408																	
KRELL DVD	Krell Showcase DVD	0418																	
DVD	LG	0278																	
DVD	Linn	0358																	
DVD	Loewe	0288	0368																
DVD	Marantz	0218	0288																
DVD	Magnavox	0138																	
DVD	Micromedia	0288																	

Device Name	Manufacturer	Codes												
DVD	Micromega	0288												
DVD	Mitsubishi	0148												
DVD	NAD	0328												
DVD	Onkyo	0078	0138											
DVD	Optimus	0228												
DVD	Panasonic	0038												
DVD	Philips	0108	0138	0218	0288	0368								
DVD	Pioneer	0118	0128	0198	0228									
DVD	Proscan	0168												
DVD	RCA	0168												
DVD	Rotel	0008												
DVD	Salora	0278												
DVD	Samsung	0088	0338											
DVD	Sharp	0048												
DVD	Sherwood	0238												
DVD	Shinco	0258												
DVD	Sony	0028	0268	0348	0388									
DVD	Sony-PS2	0298												
DVD	Teac	0278												
DVD	Technics	0038												
DVD	Theta Digital	0228												
DVD	Thomson	0178												
DVD	Toshiba	0058	0138											
DVD	Universum	0278												
DVD	Xbox	0398												
DVD	Yamaha	0018	0138	0148	0158	0168	0178	0288						
DVD	Zenith	0138	0248	0278										
DVD	3Diab	0288												
KRELL INT AMP	KAV-300i	0007												
KRELL INT AMP	KAV-300il	0007												
KRELL INT AMP	KAV-300r	0017												
KRELL INT AMP	KAV-400xi	0007												
KRELL INT AMP	KAV-500i	0007												
KRELL PRE AMP	KAV-280p	0015												
KRELL PRE AMP	KCT PREAMP	0005												
KRELL PRE AMP	KRC-2	0025												
KRELL PRE AMP	KRC-3	0035												
KRELL PRE AMP	KRC-HR	0025												
KRELL PRE PRO	HTS 7.1	0009												
KRELL PRE PRO	Showcase Pro	0019												
KRELL AUX (MRS)	MRS	0004												